



If the pilot light goes out after release, please try the following to troubleshoot any ignition issues:

1. Shake the unit. During transportation, the tilt switch (a safety feature that cuts off the gas in case of accidental tipping), may have moved into the wrong position.
2. Disassemble the thermocouple with tilt switch, then reconnect tightly.
3. Disassemble the thermocouple with the valve end, then reconnect. Do not overtighten.